Installation

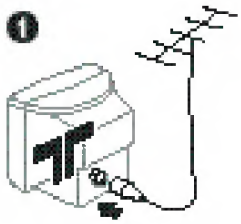

Insert the aerial plug in to the socket at the rear of the set.

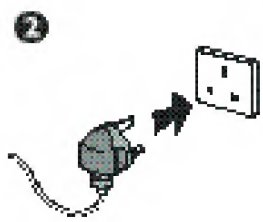

Insert the mains plug into a wall socket (220-240V/50Hz).



Insert the 2 LR03-type batteries (supplied) making sure they are the right way around.

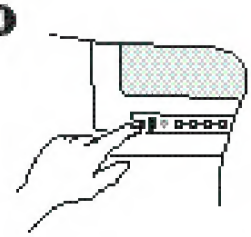

Press the on/off key to switch on the television.
If the television remains in standby mode, press the P ⊕ key on the remote control.

Channel search : Manual Stor e

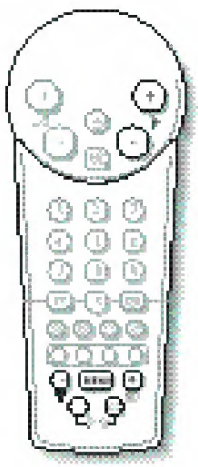

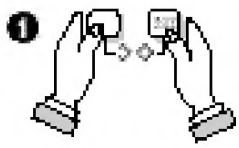

Press the 2 keys ◇◇.
The INSTALLATION menu is displayed on the screen.

Press the ⊞ key.
The MANUAL STORE menu appears.

System selection.

Option only available on certain versions.
Press key until required system appears :
FRANCE (SECAM LL') or WEST EUR (PAL BG,SECAM BG) or EAST EUR (PAL DK,SECAM DK) or UK (PAL I).

Channel search.

Press the ⊞ key.
SEARCHING appears,the search bar shows progress.
When a programme is found,the number flashes.

Choose the Programme No.

Enter the programme number you want.
Note: Programme number 0 cannot be used.

Press the 2 keys ◇◇.
STORED appears,the programme is stored.

Repeat steps ❹ to ❻ to store each programme.

To leave the INSTALLATION menu press MENU twice.

English

Downloaded from www.Manualslib.com manuals search engine

Another method :Auto Stor e

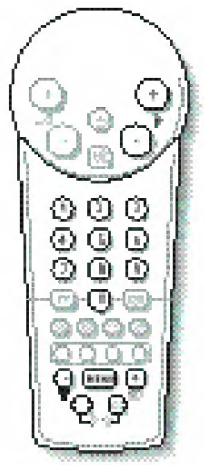

1. Press the two ◇◇ keys at the same time to select the INSTALLATION menu.
2. Using the ⊖ key, select the AUTOSTORE menu.
3. Press the ⊖ key to select the system (FRANCE or EUROPE).This option is only available on certain versions.
4. Press the ⊕ key to run AutoStore for all available programmes
   SEARCHING appears.Searching lasts several minutes.
5. When the search is finished,the INSTALLATION menu reappears.
   The programmes found are arranged by number 69,68,67,... etc.
   You may now renumber these programmes as you wish.

To renumber a programme:

1. Select the MANUAL STORE menu using the ⊕ key.
2. Select the program to be renumbered using the ⊖ P ⊕ keys (or ⓪/⑨).
   If, for example, you want to re-number programme 67 as 5:type ⑥ ⑦.
3. Press the two ◇◇ keys,the number flashes.
4. Enter the programme number you want (⊖ P ⊕ or ⓪/⑨ keys).
   In our example, type ⑤.
5. Press the two ◇◇ keys to store the programme under the new number.
   STORED appears,the programme is stored.
   In our example, programme number 67 is re-numbered as 5.
   Repeat the operation for each programme to be numbered.

To leave the INSTALLATION menu press the MENU key twice.

Using the remote control

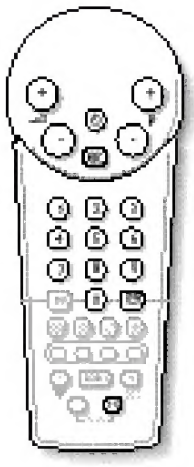

Press :		Result :
⏻	Standb y	The TV set switches off,the light is red. To turn on the TV set,press the ⊖ P ⊕ or ⓪/⑨ keys.
⊖ P ⊕	Programme selection	The number is displayed on the screen,the previous (-) or next (+) programme is selected.
⓪/⑨	Numbered k eys	The number is displayed,the programme is selected. For a 2-digit number, the second digit must be added before the line disappears.
⓪	Select EXT sockets	This key is used to select EXT1 or EXT2
⊖ ◁ ⊕	Volume	Volume is changed.
🔇	Mute	Switches sound on or off.
ⓘ	Screen inf o	To turn on or off the display of the programme number, sound mode and remaining time on the timer.
	Sound mode	Pressing this key allows you to switch from STEREO to MONO sound or to choose between language I and language II in the event of bilingual transmissions.

Downloaded from www.Manualslib.com manuals search engine

Using the menus

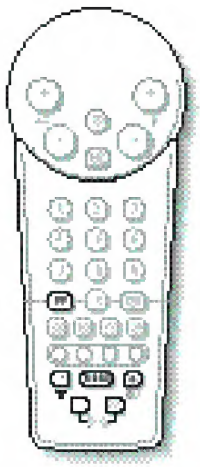

Press :	Result :
Menu	By pressing the menu button several times the following items can be adjusted : ◿ (volume), ◺ (balance), ♪ 𝄞 (bass/treble), ☼ (brightness), ◑ (contrast), ◫ (definition), ✿ (colour) and ⏲ (timer).
Menu adjustment	This modifies the menu item selected.Using the timer (⏲) function, you can adjust the time after which the TV set will automatically switch into standby mode (up to 24 hours).If you put the TV set into standby mode, it will turn itself on automatically when the time has elapsed.
Storing of adjustments	Firstly, display a menu : ◿, ◺, ♪ 𝄞, ☼, ◑, ◫, or ✿, then press the two ◇◇ keys. STORED appears.All menu adjustments are stored,except for the timer.
Personal preferences	Recall your stored adjustments.

Using the teletext

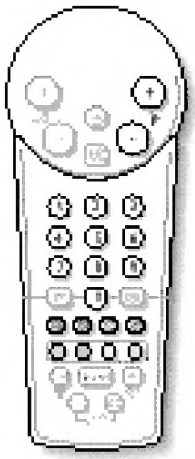

Press :	Result :
Teletext request	To turn teletext on or off.A main index appears with the list of items to which you have access. If the channel does not have teletext,the screen remains black.
0/9 Selecting a page	Use the number keys to select the page you want (always three figures).The number appears in the top left-hand corner, the counter searches then the page is displayed. If the counter continues searching or if P?.. appears, the page is not available.
- P +	To select the previous or next page.
Direct access to an item	Coloured zones are displayed at the bottom of the screen.The 4 coloured keys are used to access the items or their corresponding pages. The coloured zones flash when the page or the subject is not yet available
Stopping the sequence of sub-pages	Certain pages contain sub-pages which follow on automatically. Press the ✣ key to stop / resume the sequence.
Enlarging a page	Press this button several times to view the upper part, the lower part and then return to normal size.
Hidden information	To reveal hidden information (in games,etc.). Pressing the button a second time will again hide the information.

Downloaded from www.Manualslib.com manuals search engine

TV set keys

The TV set has 3 or 4 keys (on some models these are located behind a flap).
Versions with 3 keys: A Menu key and - and + keys to select programs and adjust menus.
Versions with 4 keys: two VOLUME - and + keys and two PROGRAM - and + keys.

Connecting peripheral equipment

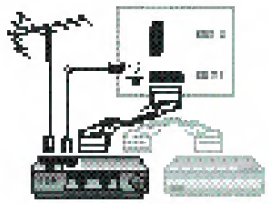

The television has 2 external sockets situated at the back of the set (EXT1 and EXT2).
The EXT1 socket has audio and video inputs/outputs and RGB inputs.
The EXT2 socket has audio and video inputs/outputs.

Video recorder (only)
Carry out the connections featured opposite. Use a good quality euroconnector cable.

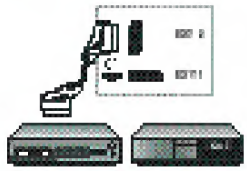

Video recorder with decoder
Connect the decoder to the second euroconnector socket of the video recorder. You will then be able to record scrambled transmissions.

Satellite receiver , decoder , CDV, games,etc .
Carry out the connections featured opposite.
To optimise picture quality, connect the equipment which produces the RGB signals (digital decoder, video recorder, etc.) to EXT1.

Headphones
The headphone socket is on the front of the TV set (depending on version, it may be concealed by a cover). When the headphones are connected, the sound from the TV set is muted. Use the ⊖◿⊕ key on the remote control to adjust the volume.

To select connected equipment

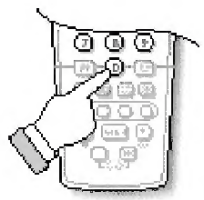

Press the ⓪ key to select EXT1 or EXT2 socket.
Most equipment (decoder, video recorder) carries out the switching itself.
When a peripheral device provides RGB signals (game, satellite receiver, ...), it has priority over the TV programmes. The peripheral device has to be switched off if you want to watch the TV channels. If you wish to avoid this inconvenience, configure the peripheral equipment to provide composite video signals (CVBS PAL/SECAM) instead of RGB signals (refer to the peripheral user manual).

Tips

Installation:
To avoid any dangerous situations and operating faults, do not place anything on the TV set and leave a space of at least 5 cm around the appliance.

Poor picture quality:
The proximity of mountains or high buildings may be responsible for ghost pictures, echoes or shadows.
If this is the case, change the orientation of the antenna.
Have you remembered to connect the aerial socket ?
Have you chosen the correct system (page 1) ?

Standby:
To save energy and preserve optimum picture quality (by demagnetising the tube), you are advised to switch off your TV set using the on/off button at the front of the TV set.

Recycling directive:
To minimise harm to the environment, the batteries supplied with the appliance do not contain mercury or nickel cadmium. When disposing of batteries, if possible use recycling means available to you (contact your dealer).
Your TV set makes use of reusable and recyclable materials. To minimise harm to the environment, specialist companies will recover used TV sets for dismantling and collection of reusable materials.

In the event of a breakdown, under no circumstances attempt to repair the TV set yourself, contact your dealer.

Downloaded from www.Manualslib.com manuals search engine